



Fuji USER MANUAL

BELT SANDERS

MODELS : FBS-1-1, -2, -3, -4

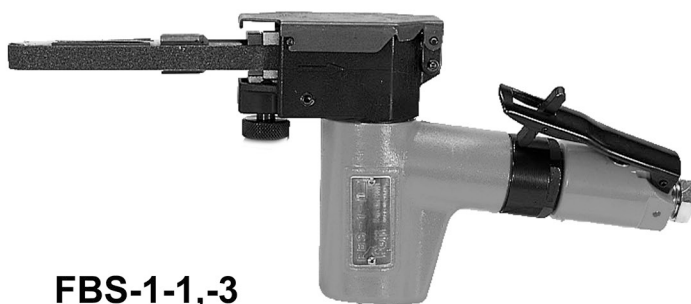

FBS-1-1,-3

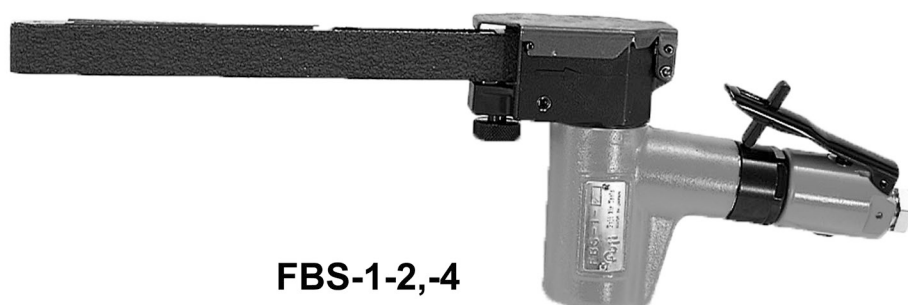

FBS-1-2,-4

SPECIFICATIONS

Model	Belt Size		Rotational Frequency	Belt Speed	Overall Length		Height		Mass		Max. Air Consumption
	mm	in	min ⁻¹	m/min	mm	in	mm	in	kg	lb	m ³ /min
FBS-1-1	10×330	13/32×12 3/64	20,000	1,200	281	11 1/64	124	4 57/64	1.1	2.4	0.57
FBS-1-2	20×520	51/64×20 1/64	20,000	1,200	375	14 1/32	124	4 57/64	1.2	2.6	0.57
FBS-1-3	13×460	33/64×18 1/8	20,000	1,200	345	13 19/32	124	4 57/64	1.2	2.6	0.57
FBS-1-4	20×460	51/64×18 1/8	20,000	1,200	345	13 19/32	124	4 57/64	1.2	2.6	0.57

Air Inlet Thread Size : Rc or NPT 1/4"
Air Hose Size : 9.5mm (3/8")

The performance figures are at 0.63MPa (6.3bar).

⚠ Refer to "The Instructions and Warning for Safety Use" enclosed in each tool box.

Fuji Industrial Technique Co.,Ltd.

2-1-14, Kamiji, Higashinari-ku, Osaka, 537-0003 Japan

Tel : 81-6-6972-2335

Fax : 81-6-6972-2380

